



**VIDEOCON**

UNIVERSAL DIGITAL CONNECT LIMITED

Marketing Office:

Plot no.: 254, IIInd Floor, Udyog Vihar, Phase-IV  
Gurgaon - 122015, Haryana, India.

Website: [www.videoconmobiles.com](http://www.videoconmobiles.com)

Tel: 0124-33660000

# USER MANUAL V1560



**VIDEOCON**  
*Mobile Phones*

[www.videoconmobiles.com](http://www.videoconmobiles.com)



and density. If improperly disposed, they can leach lead and other harmful substances into soil and groundwater. Govt. of India vide notification dated May 12, 2011 has announced E-waste (Management and Handling) Rules, 2011 ("Rules").

According to these Rules, the consumer now has the legal responsibility to dispose of the waste electrical and electronic equipment (popularly known as "WEEE") in the prescribed manner and not by just throwing it into a dustbin or giving/selling it to scrap dealer.

V RECYCLE , is an initiative by Videocon where we recycle your old and no longer useful phones.

There are 3 easy steps to begin playing your part:

Step 1: Grab your old and useless phone (or its accessories).

Step 2: Locate a Videocon Collection Point near you, available at <http://www.videoconmobiles.com/v-recycle.htm>

Step 3: Drop your old phone into the designated collection boxes.

Lets join hands today to celebrate the glory of nature earth & help in making it a better & healthier place for all of us.

# User's Manual

## V1560

**rate** and select **OK**. The exchange rate will be kept in the memory till you input a new change rate to replace it. To convert between currencies, input the currency to be converted in **Local** and then select **OK**, you will get the output in **Foreign**.

### Stopwatch

Choose to Start & Reset the stopwatch.

### Timer

Use the timer to start a countdown for an event to start.

### Ebook

The **Ebook** reader can read .txt electronic documents. You can connect the phone via a USB line to a PC and then place .txt documents in the Ebook folder on the phone or the memory card.

Select **Menu**→**Extra**→**Ebook** to find a .txt document and then select recent books to directly read the .txt document.

### E-Waste Management



#### What is E-waste?

- 'E-waste' means waste electrical and electronic equipment (WEEE).

#### How harmful is e-waste?

E-wastes are considered dangerous, as certain components of some electronic products contain materials that are hazardous, depending on their condition

To make a calculation:

1. Enter the first number of the calculation. Select **Delete** to delete the last digit entered.
2. Select a function, '+' (Up navigation key), '/' (Right navigation key), '-' (Down navigation key) or 'x' (left navigation key).
3. Enter the second number of the calculation, and select **OK** to get the result.

Press **Options** to perform additional functions:

- **M+** : Select it and then press **OK** key. This adds the value to the value stored in memory. By default it is zero.
- **M-** : Select it and then press **OK** key. This subtracts the value from the value stored in memory.

- **MR (Memory recall)** : Select it and then press **OK** key. This recalls the value from the memory.
- **MC (Memory clear)**: Select it and then press **OK** key. This clears the value from the memory.
- **Clear**: Select it to clear all memory details.

### Unit Converter

The converter application allows units of measure from one form to another. You can convert Weight and Length.

### Currency

Use the currency converter application to convert currencies from one form to another.

Choose **Menu** → **Extra** → **Currency converter**, and then set the **exchange**

<b>Legal Notices</b> .....	<b>4</b>
<b>Software Update Information</b> .....	<b>4</b>
<b>Safety Precautions</b> .....	<b>5</b>
<b>Specific Absorption Rate (SAR)</b> .....	<b>7</b>
<b>Disclaimer</b> .....	<b>8</b>
<b>Getting Started</b> .....	<b>10</b>
Assembling the device .....	10
Charge the battery .....	12
Battery Use .....	12
<b>Know your device</b> .....	<b>13</b>
Phone Layout .....	13
Key Layout .....	13
Notification Icons .....	15
<b>Basic Operations</b> .....	<b>15</b>

Switch on or off the device .....	15
Accessing Menu .....	16
Making a Call .....	16
Answering Calls .....	17
Compose and send a text message ....	18
Lock The Keypad .....	19
PC Connectivity options .....	19
<b>V-Connect</b> .....	<b>21</b>
STK .....	21
Wap Browser .....	21
Latest News .....	22
Weather .....	22
Facebook .....	22
Twitter .....	23

<b>Call History.....</b>	<b>23</b>	Memory Capacity .....	28
<b>Fun Zone .....</b>	<b>25</b>	<b>Multimedia.....</b>	<b>29</b>
<b>User Profiles.....</b>	<b>25</b>	Camera .....	29
<b>Messages .....</b>	<b>25</b>	Video Player.....	33
Write Message.....	26	Image Viewer.....	34
Inbox .....	27	FM Radio.....	34
Outbox .....	27	Audio Recorder.....	36
Drafts .....	27	Movie JukeBox.....	37
Sentbox.....	28	<b>Alarm .....</b>	<b>38</b>
Security Inbox .....	28	<b>Phonebook .....</b>	<b>38</b>
Templates .....	28	Add New Contact.....	41
Broadcast Message .....	28	Search Contact .....	41
Voice Mail Server .....	28	<b>File Manager.....</b>	<b>42</b>
Delete All .....	28	<b>Settings .....</b>	<b>43</b>

vice versa.

- **Daily:** To view & set schedule.
- **Indian Calendar:** You can view Indian Tithi details, Festival list, Date to tithi & Yearly tithi.
- **Onscreen Prompts:** Choose between None & Indian.

## World Clock

World clock can be used to know the time in various cities across the world. You can see a world map and immediate time in those cities using world clock. To see the current time in any city of the World, press **Menu→Organizer→World Clock**, and select the city name using the navigation keys.

## Torch

Select **Torch On** or **Torch Off** to switch

the torch on or off respectively. In idle mode, you can also switch on or off the torch by long pressing **“0” number key**.

## Notes

You can use your phone to keep track of Notes. Select **Menu→Organizer→Notes**, and then press **New →** to Add & Save new note.

## Extra

### Calculator

To access calculator, press **Menu→Extra→Calculator**. Your phone comes with in-built conversion application that you can use to perform calculations on a daily basis, such as addition, subtraction, division, and multiplication.

## Calendar

You can use the calendar to keep track of important meetings. To access calendar, press

**Menu→Organizer→Calendar.** You can select year, month and date using direction keys. On a selected date, you can select to view:

- **Add New Schedule:** You can add new a new schedule in the Calendar. You can set the following:
  - **Subject** – Enter the subject of the schedule.
  - **Date** – Set start date for the schedule.
  - **Time** – Set time for the schedule.
  - **Ringtone**– Set the desired ringtone for the schedule.
  - **Type** - Set the reminder to repeat

once, daily, weekly, and so forth.

- **View Schedules:** If there is a special background color on a date, it means there is some task on that day. You can also view any note/remark mentioned by you for a task stored by you earlier.
- **All Schedules:** View all the stored schedules.
- **Clear Today's Schedule:** Allows you to delete all the today's tasks.
- **Clear All:** Allows you to delete all the schedules saved on the calendar.
- **Go To Date:** Enter a date, and then select **OK** to go to a specific date for entry/edit and viewing of task for that date.
- **Weekly:** Allows you to switch the view of calendar from monthly to weekly, and

Phone Settings .....	43
Display Settings.....	43
Security Settings .....	44
Call Settings .....	46
<b>Organizer .....</b>	<b>49</b>
Bluetooth .....	49
Calendar.....	50
World Clock.....	51
Torch.....	51
Notes.....	51
<b>Extra.....</b>	<b>51</b>
Calculator.....	51
Unit Converter .....	52
Currency.....	52

Stopwatch.....	53
Timer .....	53
Ebook.....	53

## Legal Notices

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited. VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused. The contents of this document are

provided as it is. Except as required by applicable law, no warranties of any kind, either deselected or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

## Software Update Information

To enhance device performance, we

earlier conversations periodically on a PC so that memory card is kept sufficiently free.

## Connections

Allow you to choose Network Account (data account), On/Off GPRS Service, On/Off Data Roaming and Network Selection.

## Organizer

### Bluetooth

You can communicate with other compatible device through wireless Bluetooth connection. Compatible devices may include Mobile Phones, Personal Computers, and Bluetooth headsets. Through Bluetooth, you can send or receive pictures, videos or music

files.

To access this menu, press **Menu→Organizer→Bluetooth**. The available options are:

- **Bluetooth**: Select to On/Off the Bluetooth.
- **Bluetooth Visibility** : Set the Visibility of the Bluetooth
- **Paired Devices**: It shows a list of devices which have been paired with your phone before.
- **Device Name**: You can view or edit the name of the Bluetooth device.
- **Bluetooth File Storage**: Set the storage location in the memory card of files received via Bluetooth.

**Note:** Bluetooth needs to be activated to perform all the above mentioned functions.

You can set the time duration to reject the active call.

### Caller ID

Enables you to display Own ID, Display ID by network of the caller ID of the phone. It is a network based service.

### Others

Enable you to set others settings. The options are:

- **Call Time Minute Reminder:** Set this function to On or Off to receive a warning tone after selected time in the call.
- **Auto Redial:** You can select **On** or **Off** to redial the number automatically when a call is not connected.
- **Vibration When Connected:** Activate this function to receive a vibration


notification when your call is connected.

- **Reject By SMS:** Allow you to reject the incoming call and send SMS to caller from the list of preloaded templates.
- **Auto Call Recorder:** Select **On** or **Off** to record the incoming calls automatically. The recorded phone conversations will be saved in the **Auto Call Record** folder of memory card. If the number is saved in the contacts list, then phone will create the folder with the saved name else it will save with the phone number. All the future conversations will be saved in the same folder. This feature is memory card dependent. Please note if the memory card storage is full, then the phone will stop the auto call recording function. You need to ensure to take back-up of

recommend that you get in touch with the nearest VIDEOCON Authorized Service Center, regarding the availability of updated firmware for your device. Please see the enclosed Service Center Directory for the VIDEOCON Authorized Service Center nearest to your location.

### Safety Precautions

Please comply with these precautions to avoid putting yourself or other around you in a dangerous or illegal situation, and ensure peak performance of your device.

Icon	Description
	<b>ROAD SAFETY</b> Do not use your phone while driving.



**INTERFERENCE**  
All wireless devices could affect your device performance.







**HOSPITALS**  
Switch off your device near hospitals and medical equipment.



**AIRCRAFT**  
Switch off your device in aircraft. Wireless devices can cause interference in aircraft.



**REFUELLING**  
Switch off the device when refueling. Do not use the device at refueling point.

	<b>BLASTING AREAS</b> Switch off the device near blasting areas.
	<b>USE SENSIBLY</b> Use in normal condition, as explained in the User's manual. Do not touch the antenna unnecessarily.
	<b>QUALIFIED SERVICE</b> Only qualified personnel may install or repair phone.
	<b>BATTERIES</b> Use only approved batteries. Do not connect incompatible products.



**WATER-RESISTANCE**  
Your device is not water-resistant. Keep it dry.

### Important safety measures

Your phone is designed to comply with all the necessary precautions and requirements and should be treated with care. The suggested safety measures will help you to use this product without causing you any health hazards.

- When buying a cell phone, make sure it has a low SAR (Specific Absorption Rate).
- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

choice.

- **Set Dual SIM Call Divert:** By this you can activate call divert on both of your SIM card to take benefit when either one of the SIM card in active call.

### Call Divert

This feature allows you to divert incoming calls from SIM1/SIM2 to voice mail or another phone number. You can activate/deactivate this function to all calls, voice calls, and check the query status for options. The sub-options available for each function are, call forwarding unconditional, call forwarding on busy, call forwarding on no reply, divert if unreachable, and cancel all diverts. This is network provider dependent service.

### Call Waiting

You can activate this function to answer an incoming call in between an existing active call. Under query status, you can view the current activation or deactivation status.

### Call Barring

Use this function to restrict the calls you make or receive with your device. Under call barring, the options are outgoing calls and incoming calls. You can also cancel all call barring. To change the barring password, you may required to put the old password. In order to activate this service, you need to check the availability with your network service provider.

### Reject Call Time

Enter the new password and select **OK**. You will then be asked to input verified notice number and then select OK.

○ **Status – Off:** Select to put the mobile tracker function to off. You are required to put the new password.

○ **Change Password –** Enter the 4-digit new password and confirm the new password. The default password is "0000".

The moment, a new SIM card is inserted into your device, its number is sent via text message to the number you have specified in the **On** section.

• **Fixed dialing:** Limit outgoing calls to specific numbers only, you need PIN2 from operator side to activate this.

• **Blacklist:** You can view the blacklisted contacts & change the settings of

blacklist.

• **Whitelist:** You can view the whitelisted contacts & change the settings of whitelist.

### Call Settings

**Dual SIM Settings:** You have following options listed under Dual SIM settings:

• **Standby Mode:** Allows you to activate SIM1, SIM2 and Flight mode.

• **Reply by Original SIM:** Allows you to reply to a SMS, call or MMS by the same SIM, on which you have received the SMS, call or MMS.

• **Set SIM Name:** You can give name to both the SIM cards according to your choice.

• **Set SIM Color:** You can set color to both the SIM cards according to your

• Either keep calls short or send a SMS instead. This advice applies especially to children, adolescents and pregnant women.

• Whenever possible, only use cell phone when the signal quality is good.

• People having active medical implants should keep their cell phone at least 15cm away from the implant.

### Specific Absorption Rate (SAR)

Your phone meets the SAR requirements for exposure to radio waves, recommended by Govt. of India. Your mobile phone is a radio transmitter and receiver. It is designed and

manufactured so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the Govt. of India. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the Govt. of India is 1.6 Watt/kg taken over a volume containing a mass of 1 gram of tissue.

The highest SAR value for **V1560** is **0.796**

W/Kg. Press \*#07# to check the SAR value on your phone display.

## Disclaimer

Some applications accessible through your mobile belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Those applications are provided solely for your personal noncommercial use. You may not use any application in a manner that has not been authorized by the application owner or provider.

Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload,

post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device. "Third party content and services are provided "as is." VIDEOCON does not warrant content or services so provided, either expressly or impliedly, for any purpose. VIDEOCON expressly disclaims any implied warranties, including but not limited to, warranties of merchantability or fitness for a particular purpose. VIDEOCON does not guarantee the accuracy, validity, timeliness, legality, or completeness of any content or service made available through this device and under no circumstances, including negligence,

## Settings→Privacy Protection.

Select the **Settings** and input the default password as "0000" to display the privacy screen. Choose the folders you want to lock such as Call History, Messages, Camera, Phonebook, File Manager, EBook, Calendar, Mass Storage Audio Player and Video Player. You can also **change the password** for the privacy settings of your phone.

- **Auto Keypad Lock:** Enable Auto keypad lock to have the devices disable the keypad after staying idle for some time. This is done to prevent against accidental dialing. For more information on this feature, refer to the "**Lock the keypad**" section mentioned earlier in this document.

- **Lock Screen By End Key:** Select the

feature for locking the screen by pressing end key once.

- **Mobile Tracker:** Use Mobile tracker feature to help you locate your device if it is lost or stolen. When someone inserts a new SIM card in your device, the Mobile tracker feature automatically sends a message to preset recipients, so that you can initiate steps to recover it. In order to activate this function, you need to change the password for the function first.

To activate Mobile tracker, press

**Menu→Settings→Security**

**Settings→Mobile Tracker.** The available options for Mobile tracker are:

- **Status – On:** In order to activate the function, first **change the password** (as explained in bullet **Change Password**).

- **Wallpaper Settings:** Set favorite wallpaper on the main screen of your phone. The available wallpapers are system default wallpapers and more wallpapers.
- **Idle Display Settings:** Allows you to choose between time & date, service provider, today's schedule, and customized banner to be displayed at idle display screen.
- **Brightness:** Allows you to adjust the brightness of phone's display.
- **Backlight:** Control the time in seconds for the phone display.
- **Keypad Backlight Time:** Allows you to select the time in seconds for the keypad backlight time.

## Security Settings

Adjust settings to secure your device and data:

- **PIN:** You can activate, modify and off the PIN lock for SIM1 and SIM2. To use these features, you need to check with your service provider.
- **Modify PIN2:** You can modify the PIN2 for SIM1 and SIM2. To use these features, you need to check with your service provider.
- **Phone Locked:** Activate this function to enter the password as you switched on your phone. The default password is "0000".
- **Modify Phone Password:** You can modify the phone lock password the default password is 0000.
- **Privacy Protection:**  
Press **Menu**→**Settings**→**Security**

 
shall VIDEOCON be liable, whether in contract or tort, for any direct, indirect, incidental, special or consequential damages, attorney fees, expenses, or any other damages arising out of, or in connection with, any information contained in, or as a result of the use of any content or service by you or any third party, even if advised of the possibility of such damages." Third party services may be terminated or interrupted at any time, and VIDEOCON makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which

VIDEOCON has no control. Without limiting the generality of this disclaimer, VIDEOCON expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device. VIDEOCON is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.


## Getting Started

### Assembling the device

1. Gently hold the back cover and slide in upward direction to open the back cover.



 2. If the battery is in the compartment, lift and pull it out in the direction of the arrow (shown below).

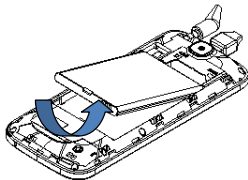

3. Insert the SIM cards into their respective slots. Make sure that the contact areas on the cards are facing the connectors on the device as shown below.

## Settings

Use Settings to customize the device settings, such as Phone settings, Display settings, Security settings, Call settings and other options, which can be accessed by Navigation keys to secure the data you have stored in the device. Press **Menu** → **Settings** to display the settings menu.

### Phone Settings

You have following options listed under phone settings:

- **Date & time:** Lets you set time, date, time format, and date display time on idle screen.
- **Language Settings:** The device currently supports English and Hindi both as display & writing.

- **Shortcut Settings:** You can modify shortcuts assigned on RSK & navigation keys.

- **Schedule Power On/Off:** Lets you set a particular time on the phone when the phone should auto power on/off itself.

- **Battery Status:** You can check the status of battery level of your phone.

- **Restore Factory Settings:** Selecting this option will ask you to enter the password to restore the phone to its factory settings. The default password is set as "0000".

### Display Settings

Under display settings, you can set a host of different characteristics of the phone. You have following option under display settings:

As you type, all matching contacts display as a list, use the navigation keys to select the required contact, and press the **Dial key** to initiate a call to this contact by choosing the desired **SIM Card**.

 
 
## File Manager

View files and folders stored on the **Memory card**. In memory card, you can view various options, such as Photos, Audio, My music, Answering machine, and so forth. Select the desired folder and press **Options** for additional actions:

- **New folder:** Allows you to create a new folder to store your files.
- **Delete:** Allows you to delete the folder.

- **Details:** Allows you to view the details related with the folder.
- **Edit:** Allows you to edit the details of folder, such as rename it, copy or move the folder to another location in memory card.
- **Search:** You can search the files in the folder.
- **Sort:** Sort the files by name, time, size and type.
- **Mark:** Allows you to mark, unmark, mark all and unmark all the folders in the memory card to perform one single function.
- **Memory Status:** Allows you to check the Phone/memory card capacity and format the Phone/memory card.

4. Insert memory card. Take compatible micro SD card, and place it into its respective slot.

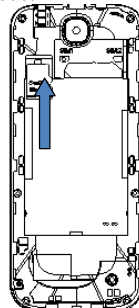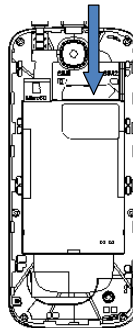

## Charge the battery

To charge the device battery:

1. Take the USB cable from the device packaging, and attach it to power adapter. Now connect the power adapter into a standard AC wall outlet.

2. Connect the micro USB connector on the cable into its designated port at the bottom of the device. The battery level indicator on the device screen will start scrolling horizontally to indicate that the battery is being charged.

**Note:** Exercise extreme caution while connecting the charger to the device. The connectors on the charger and on the phone may get damaged if too much

force is applied while connecting them.

3. If the battery is completely discharged, it may take a while before the on-screen charging indicator starts scrolling.

4. When the battery is fully charged, the battery level indicator on the device screen will stop scrolling.

5. Once the charging is complete, disconnect the charger from the device and then from the wall outlet.

## Battery Use

To extend the battery life of your device:

- Use the standard wall charger to charge the battery for the first time.
- During the first 3-4 charge cycles,

can connect to the desired contact number quickly. You can assign any contact number to one of the number keys (2-9) to enable speed dialing on your device and by default (1) number key is enabled for voice mail. On the keypad, press and hold the number key corresponding to the desired contact number to initiate a call. You can set the **status** to **On** or **Off** and **set** the **contact numbers** on the number keys (2-9).

- **Own number**- You can add your own number to your SIM card.
- **Memory Status** – View the used and available memory for storing contacts in SIM1/SIM2 or Phone memory.

## Add New Contact

To add a contact:

1. Press **Menu**→**Phonebook**→**Options**→**New**.

2. Choose **Select Storage** such as SIM1/SIM2 or Phone, and then **edit Name** to enter the name of the contact. Then, select **OK**.

3. Select and edit **Mobile** to enter the phone number, and then select **OK**. Select **Save** to save the contact. You can also add more details to the contact. **Note:** If you choose to add the contact in phone memory, then you can add more details, such as home number, URL, ringtone and select them to unclassified group.

## Search Contact

Search a contact just by entering the first few letters in the contact's name.

service with your service provider) to the selected contact.

- **Call:** Place a voice call to the selected contact.
- **Delete:** Remove number from the contacts list.
- **Delete Multiple:** Remove selected number from the contacts list.
- **Delete Phone Contacts:** Remove number from the contacts list which are stored on phone memory.
- **Delete SIM1 Contacts:** Remove number from the contacts list which are stored on SIM1.
- **Delete SIM2 Contacts:** Remove number from the contacts list which are stored on SIM2.
- **Move:** Move contact to an alternate

storage location, such as, phone, SIM1/2 or memory card.

- **Add To Blacklist:** You can add contacts saved in your phonebook to the Blacklisted contacts so that you will not receive calls from those numbers. In the Blacklist contacts, you can view and remove blacklisted contacts. To add contact numbers in the blacklist list, you need to select that contact and copy it to phone then **contact number** → **Options** → **add to Blacklist**.
- **Import/Export:** You can copy or import/export marked contacts.
- **Send vCard:** You can the vCard of the number via SMS, MMS or Bluetooth.
- **Others:** The others options available in contacts are:
  - **Speed Dial**– With speed dialing, you

charge the battery until the battery indicator on the display stops scrolling.

- Avoid partial charging. Also, wait for the battery to discharge completely before charging it again.
- Charge the battery using the USB cable only if the recommended wall charger isn't readily available.
- Avoid keeping the device on vibrate mode.

## Know your device

### Phone Layout



## Key Layout

### Left Soft Key

In idle mode, press **Left Soft Key** to access the main **Menu**. When navigating

the menu, press **Left Soft Key** to open the desired option.

#### Right Soft Key

In idle mode, press **Right Soft Key** to access **Names**.

Use to perform functions that display in the lower right of the display screen. For example, it works as a key to navigate the previous screen.

#### Dial Key

- In idle mode, enter the phone number to call and then press **Dial key** to choose desired SIM, which you want to use to initiate the call.
- Press **Dial key** to answer an incoming call.
- In the idle mode, press **Dial key** once

to view the **Call History**.

#### Power/ End Key

- End or reject calls.
- Press and hold to switch on or off the device.
- Cancel active menu and return to the idle screen.

#### OK Key

In menu, use **OK key** to perform the functions that display in the lower left of the display screen.

#### Keypad (0-9)

- In idle mode, use the 0-9 keys to **enter a number** to call.
- Select and hold a digit key to dial its associated speed dial contact.
- In idle mode, press and hold "**1**" key

following tabs:

- **All:** Use to view all the contacts available in the Phone, Groups, SIM1, SIM2, and also Black list numbers.
- **Most Used:** Use to view the contacts which you called frequently.
- **Groups:** Options are as below:
  - **1.SIM1/SIM2:** Use to view the contacts available in the SIM1 and SIM2.
  - **2.Family/ Friends/ Business/Classmates:** Use them to organize your phonebook for easier access, and faster retrieval of contacts. For example, you can put all of your friends in the **Friends** group, and your office colleagues under the **Business** group. Combining contacts in a group allows you to perform the same action for multiple contacts quickly. You can

change the name of the group and can change the group of any contact. For example, you could collectively send greetings to all contacts in the group. By default, every new number added will be categorized under unclassified.

#### Phonebook Options

Select a contact and choose **Options** to view actions that you can perform for the selected contact:

- **New:** Select it to add new contact to Phone, SIM1 or SIM2.
- **Write Message:** Create and send a SMS or MMS
  - **SMS-** You can create and send a text message to the selected contact.
  - **MMS-** Create and send multimedia message (check the availability of the

## Alarm

Press **Menu**→**Alarm**, to set the alarm to ring at a specific date and time. On a selected Alarm, press **ON (Left navigation key)** to activate it and press **Off** to deactivate the alarm. Select **Edit** to access the following sub-options:

- **Message:** Set the customize message for the alarm.
- **Time:** Set the time at which you wish to ring the alarm by using 0-9 Number keys.
- **Ringtone:** Select the tone of the alarm from default ringtones or user defined ringtones.
- **Snooze time:** Set the time of the alarm till which you wish it to ring.

- **Repeat Mode:** Select the type format of the alarm, whether you wish to ring the alarm once, daily or weekly.

## Phonebook

Save and update contact information, such as name and phone numbers. You can also organize your contacts into Groups.

You can set caller picture, alert and a personal ring tone to the contact and also organize your contacts into Caller groups.

Press **Menu**→**Phonebook** to view the stored contacts or in idle mode, press **Right soft key** to directly access the **Phonebook**.



The **Phonebook** menu comprises









for **Voicemail**.

- While entering the number on the idle screen, the device suggests you matching contacts so that you can scroll to the desired contact. Once the contact is selected, press the **Dial key** and select **SIM1** or **SIM2**, which you want to use to initiate a call to the contact.

## Notification Icons

Notification (indicator) icons provide information such as battery level, network signal strength, alarm activated, and so forth.

Icon	Description
	Battery level indicator
	SIM1/2 Network signal strength

	Roaming is active
	Unread messages
	Alarm is activated
	Meeting mode is active
	Indoor profile is activated
	Outdoor (Vibrate and ring) profile is active
	Earphone inserted
	Bluetooth activated

## Basic Operations

### Switch on or off the device

To switch on the phone, press and hold

the **Power/ End** key. To switch off the phone, press and hold **Power/ End** key again.

### Accessing Menu

To access your device menu:

- In idle mode, press **Left soft key (Menu)** to view various device functions, and settings required for configuring the device.
- Use the navigation keys to scroll to Menu applications.
- Press the **OK** key, to confirm the highlighted option.
- Press **Back** to move up one level. Press **End key** to return to the idle mode.

### Making a Call Using keypad

To make a call using the keypad, enter the phone number including the area code. Press **Delete (Right soft key)** to erase a digit, or press and hold **Delete** key to erase the complete number. For international calls, add the “+” character that replaces the international access code, and enter the country code, area code (omit the leading 0, if necessary), and phone number. Press **Dial key** & choose SIM1/2 which you want to use to initiate the call.

### Using Phonebook

Press **Right soft key** in the idle mode to access Names of the contacts or press **Menu → Phonebook** to view the contacts. Use the **Up** and **Down Navigation Keys** to select the contact

- **Start recording:** Start recording sound.
  - **Record file list:** Lists all recorded sounds.
  - **Storage:** Select the storage as phone memory or memory card for storing all the sound recordings.
  - **File Format:** Select the file format to record clip in the respective format.
- Note:** If the sound file is set up as ringtone, once renamed, then the sound file will no longer be available with audio profiles.

### Movie JukeBox

Press **Menu → Multimedia → Movie JukeBox** to access the function. **Movie JukeBox** helps you to play super-compressed movie files. You can play specific movie format “.KMV” that is a

proprietary compressed video format, with which you can enjoy more movies stored on your memory card under Movie JukeBox folder. For example, normally in a 2GB memory card, you can store a maximum of two movies. With the help of Movie JukeBox, you can store up to 40 movies. Please note this application is memory card dependent.

**Note:** To compress movie files (format, such as .avi and MP4) into .KMV format, you are required Movie JukeBox converter tool along with the instructional guide which is available on our website [www.videoconmobiles.com](http://www.videoconmobiles.com)

In FM Radio, press **Left Soft Key** to access the following options:

- **Auto Search And Save:** Allows you to search and save channels automatically.
- **Channel List:** View and edit your favorites channels, and also give name to the channels.
- **Save:** Allows you to name the saved channels.
- **Manual Search:** Manually enter the channel frequency.
- **Open Speaker:** With the headset connected to your device, select open speaker to listen to the radio using the device speaker.
- **Background Play:** Select whether to play or not to play the FM radio in the background while using other

applications.

- **Record:** Allows you to record the current FM broadcasting program.
- **Schedule FM Record:** Turn on to record the broadcast on scheduled time.
- **Record File List:** Allows you to view and play all the recorded FM radio broadcasts.
- **Storage** – Select **memory card** or **phone** to save recordings.

### Audio Recorder

With Sound recorder, you can record voice conversations and save the voice recordings as a sound clip, and play the sound clip. Sound recorder supports the AMR, WAV file format. Press **Options** to perform additional actions:

you wish to call, and press the **Dial key** & choose SIM1/2 which you want to use to initiate the call.

### Using Call History

Press **Menu** → **Call History** and retrieve a number from the recently all, dialed, received, and missed calls. Press **Dial key** & choose SIM1/2 which you want to use to initiate the call.

### Using headset

Use the headset from the product packaging and connect it to its designated slot at the top of the device. The headset acts as an antenna for your device and helps to detect radio signals from nearby stations. You can receive a call with the help of hook switch.

### Answering Calls

To answer an incoming call, press the **Dial key** or **Answer (Left Soft Key)**. To put phone on silent mode, press **Right soft key** to **Silent** the ringtone. Press **Power/ End key** to reject the call.

### Working with Call Options

During an active call, press **Speaker (Right soft key)** to put call on loudspeaker, and press it again to use the Handset of the phone. Select **Options (Left soft key)** to view the following options:

- **Speaker:** Allows you to put active call on loudspeaker. Press it again to use earpiece.
- **Add new call:** Input number to add new call.
- **Hold:** During an active call, select **Hold**

to put the call on hold.

- **Start Recording:** Allows you to start recording the active call.
- **Mute:** During an active call, select **Mute** to disable/enable the microphone.
- **Adjust volume:** Allows to you change the volume level.
- **Phonebook:** During an active call, you can access the contact numbers.
- **Call History:** Displays the SIM1 and SIM2 call history.
- **Message:** Allows you to view the messages stored in the device.

### Compose and send a text message

Your device supports text messages beyond the limit for a single message.

**To write a text message:**

1. Press **Menu**→ **Messages**→ **Write Message** →**New SMS**, to display the **Write Message** screen.
2. While writing a text message, you can do the following :
  - To switch between the **English, Hindi** character and **Numeric mode** (123), press **#**.
  - To erase the last character typed, select **Clear** by pressing the **Right Soft key**. Press and hold **Clear** to erase more than one character.
  - Press **`\*'** to insert symbols or other special characters.
  - To insert space, press **'0'**.
3. In the To field you can manually enter the phone number or select Names to

stations.

### Listening to the FM Radio

To listen to the FM radio:

1. The headset acts as an antenna and helps receive radio broadcast signals. To operate FM radio via headset, you can connect the headset into the headset jack of your device.
2. In idle mode, press **Menu**→**Multimedia**→**FM Radio** or simply press **Right navigation key** in the idle mode to launch **FM radio application**.
3. Turn on the FM radio. If you turn on the FM radio for the first time, confirm the **auto search and save** for channels.
4. Use **Left** and **Right navigation keys** to switch from one radio station to another.

5. Press **OK key** to play and resume the FM radio.

6. Use **"#"** to increase the volume, and **"\*"** to decrease the volume.

7. Press **Exit** to stop FM radio.

8. Press **Down navigation key** to start the recording of current radio broadcast. Press **Stop** (Right Soft key) to stop the recording or press **Pause** (Left Soft key) to pause the recording. As you stop the recording, you will ask to rename the FM recording. Press **OK** to confirm saving the recording.

9. While playing **FM radio**, press **Power/End key** to play it in **Background**, which allows you to perform other functions on your phone.

### FM Radio Options

additional functions:

- Press **OK** key to pause and resume the video.
- Press **Up** and **Down Navigation keys** to increase and decrease the volume respectively.
- Press **Left** and **Right Navigation keys** to switch between the videos.
- Long press **Left** and **Right navigation keys** to **rewind** and **forward** the video respectively.
- Press **\*\*** to watch the video in the **full screen mode** and press it again to exit from full screen.

### Image Viewer

To view photos stored on your device, press **Menu→Multimedia→Image Viewer**.

The Image viewer function stores all the images, which are captured by the phone camera and are stored either in **Photos** folder of phone memory or micro SD card. It provides you options, such as set as wallpaper, delete, share, mark, rename, slide play and so forth.

### FM Radio

You can turn your mobile phone into a portable FM radio device. The quality of the radio broadcast depends on the coverage of the radio station in that particular area.

Use the headset from the product packaging and connect it to the device to operate FM radio. The headset acts as the antenna for your device that helps to detect radio signals from nearby

select the desired contact from the phonebook. To select the desired contact press **OK key** and then press **Options → OK (Left soft key)**.

4. In the **Write Message** screen, type the message text. Press **Options→ Insert template** to use built-in template.

5. Select **Send** and then select **SIM1** or **SIM2** to send the text message. Press **Back** to return to the **Write Message** screen to modify your message.

### Lock The Keypad

The device keypad is set to lock automatically after configurable time delay when the device is in the idle mode and no function has been used. To enable auto lock for the keypad, press **Menu→ Settings→Security**

### Settings→ Auto Keypad Lock.

Select **Off** to disable automatic locking of the keypad, or set the duration (in seconds/minutes) after which the keypad is locked automatically.

In idle mode, to lock the keypad manually, press Left soft key followed by (\*). Similarly, to unlock the keypad, press left soft key followed by (\*).

**Note:** When the keypad is locked, you can press **Dial key** to answer an incoming call.

### PC Connectivity options

You can connect your phone with a PC and use it to enhance your productivity. For instance, you can transfer files and images between your device and a computer.

To do so, take the USB cable from the product packaging, and connect its smaller end to the mini USB connector on the device, connect the other end into the USB port on your computer. An on-screen dialog prompts you to select the connection mode :

- Select **Charging** to charge the battery.
- Select **Mass Storage** as the USB connection mode in your device. Your device is displayed in the Windows file browser as a Removable Disk. Use the Windows file browser to copy, move, or delete data from the device storage areas.
- Select **Com Port** to use your phone as a modem for your computer to connect to the Internet or any other network

services. To do this, you need modem drivers installed on your PC. These drivers are automatically installed the first time you use this feature.

- Choose **Webcam** to use the built-in camera as a web camera to chat using any instant messaging clients you may have installed on your computer, such as Yahoo Messenger, Windows Live Messenger and so forth.

**Note:** Make sure that the modem drivers are installed in your PC. If they are not installed, then you have to install them manually.

To use this feature, you need to first subscribe to the data service being offered by your telecom provider, and ensure that you have the necessary

**Decrease** the **Zoom** level. Press **Left** and **Right Navigation Keys**, you can access more **Video Recorder Options**.

## Audio Player

Press **Menu**→**Multimedia**→**Audio Player**, to launch the audio player application.

Your device provides you a friendly audio player device for entertainment purpose. The supported file formats are WAV, MIDI, MP3, and AMR.

- Press **OK** key to play and pause the song.
- Use “#” and “\*” keys to **increase** and **decrease** the **Volume** respectively.
- Press **Left** and **Right Navigation keys** to change the tracks in audio player.

- Long press **Left** and **Right Navigation Keys** to rewind and forward the song respectively.

- Press **Down** navigation key to customize **Equalizer** settings.

- Press **Up** Navigation key to **stop** the audio player.

## Video Player

Play videos stored on the phone memory or the micro SD cards.

If you are a first-time user, select **Player List** to have the device automatically search for videos stored either on the **Video** folder of memory card and adds them to the default playlist. With the video player, you can watch videos in 3GP and MP4 formats.

You can also select **Options** to perform

- **Shoot Mode** – Select the shoot mode for recording the video. You can choose between camera mode and Camcorder mode.
- **Size** - Set the size of the video, such as 320X240, 176x144, 160x128 and 128x96.
- **Brightness** – Allows you to adjust the brightness level of camera while recording the video.
- **Contrast** – Allows you to increase or decrease the contrast for recording the video.
- **Effect** – Set the effect that you wish to use for the recorded videos. You can choose Normal, B&W, Blue, Green, Yellow, Red, Sepia and Negative.
- **View Video Directory:** View the videos stored in your phone. Select

- Options** to new folder, send, delete, details and so forth.
- **Settings:** Allows you to customize settings of the camera for recording the videos.
  - **Banding** - Set the banding frequency between 50Hz and 60 Hz.
  - **Audio player** - Set **Activate/Off** to enable or disable to record the audio while recording the video.
  - **Video Format** – Allows you to select the recording format as AVI or 3GP to record a video file.
  - **Storage:** Select **Memory Card** as storage space for saving the recorded videos.
  - **Help:** In help, press **Up** and **Down navigation keys** to **Increase** and

settings for browsing the Internet, sending or receiving multimedia messages and so on.  
Please note that **Mass Storage** function is **Memory Card** dependent.

## V-Connect

### STK

Short for SIM Toolkit, it is a standard for providing value added services and e-commerce over the GSM networks, using the phone to make the necessary transactions. Services depend on your network service provider.

### Wap Browser

Internet Service browser provides all the basic services of a computer based web

browser but is simplified to operate within the restrictions of a mobile phone. Select the desired SIM.

- **Input URL:** Enter the desired address (URL) of the website or webpage in this column.
  - **Search:** Enter information to search with the help of default search engine.
  - **Bookmarks:** Bookmark enables you to mark a place in an electronic document or a pointer (primarily to an internet URL) in an Internet web browser.
  - **History:** Allows you to view the web history of your internet.
  - **Offline pages:** Allows you to view the list of stored web pages.
- Options:**
- Allows you to open homepage,

change the browser settings or exit.

- **Homepage** - Homepage allows you to open the default URL on the phone. This will enable you to go to the same page every time you access the homepage.
- **Settings** - Allows you to modify the browser settings.
- **Exit** - Press to exit from the browser.

#### To access internet on your device:

1. Press **Menu** → **V-Connect**, and then go to **Wap Browser**.
2. Select **Options** → **Settings** → Select the proper **network account** for **SIM 1/2**
3. Go back to Home again. Select **Options** → select **Homepage** or **Input URL** to open the desired webpage.

### Latest News

This feature provides you with access to

latest news and market data wherever and whenever you want. You can get extensive world, business and market news, corporate information, latest news on sports, science, health, technology and entertainment and so forth.

### Weather

A weather forecasting application provides you up-to-minute weather forecasting and weather news information. This application supports all cities of world, and tells you everything you need to know about weather forecast.

### Facebook

Stay connected and share information with friends. You can share status

makes while taking a photo.

- **Auto Save** – Select **Activate** to save the captured images automatically or select **Off** to let the phone ask you to save the images.
- **Storage:** Select **Phone** or **Memory card** as the storage space for saving the captured images.
- **Photo Anchor** – Select **Activate/off** to photo anchor.
- **Restore Default Settings** – Allows you to restore default camera settings for capturing the images.
- **Help:** In help, press **Up** and **Down Navigation keys** to **Increase** and **Decrease** the **Zoom** level. Press **Left** and **Right Navigation Keys**, you can access more **Camera Options**

### Video Recorder

Press **Menu**→**Multimedia**→**Video Recorder**, to launch the Video recorder application.

Position the camera towards the moving object, and press the **Record (OK key)**. Press **OK key** to play and pause the video recording. The video that you record can be of **3GP** and **AVI file format**. To **Stop** recording, press the **Left Soft Key**. As you stop the recording, the video will automatically **save** the **Video** folder of **Phone** or **Memory card**.

Press **Left soft key** to view and use other camera functions:

- **More options:**The available options are:

- **Exposure Bias**– Allows you to adjust the exposure to capture the image.
- **Frame** – Select from the given frames for capturing the images.
- **Continuous Shots** – Select it to capture images in continuation. Select Disable, 3 Shots and 6 Shots.
- **White Balance** - Increase or decrease the white balance to get image colors to display as accurate as possible. You can select auto, incandescent, fluorescent, sunny day and cloud.
- **Delay** – Select the delay in time as 3s or 10s so that your camera will capture the image automatically after the delay time. You can choose to disable the option for an immediate capture.
- **Effect** – Set the effect that you wish to

use for the captured images. You can choose Normal, B&W, Blue, Green, Yellow, Red, Sepia and Negative.

- **Image Viewer:** View the clicked images captured by your phone. Select **Options** to change folder, send, slide play, delete, set image as wallpaper and so forth.
- **Settings:** Allows you to customize settings of the camera while capturing images.
  - **Quality** – Set the quality for capturing the image, as high, medium and low.
  - **Banding** - Set the banding frequency between 50Hz and 60 Hz.
  - **Shutter Sound** - Set **Activate/Off** to enable or disable the sound that camera

updates from your home screen, check out your News Feed, review your upcoming events, look at your friends' walls and user information.

### Twitter

Twitter is a social networking site that enables you to share ideas through short texts popularly known as "tweets". It's a great way to keep in touch with your friends and quickly broadcast information about where you are and what you are up to.

Twitter can also be used in businesses to broadcast your company's latest news and blog posts, interact with your customers, or to enable easy internal collaboration and group communication.

### Call History

On the idle screen, select **Menu** → **Call History**.

The **Call history** menu comprises following options:

- **Missed Calls:** Calls you were unable to answer before the termination of ringing.
- **Dialed Calls:** List of the recently dialed numbers.
- **Received Calls:** List of recently received calls.
- **Rejected Calls:** Calls you were unable to answer & rejected while ringing.
- **Blacklist:** List of calls from blacklisted numbers.
- **Delete All:** To delete the entire call history.
- **Call Timers:** View the time data for

your calls, such as the duration of the last call and the total time of dialed or received calls. You can also reset the call time counter.

- **GP RS Counter:** Select SIM1/2 to check the data sent or received.

From the list of calls, select any contact number and then press **Options:**

- **Details:** View the name of the contact, contact's number, date and time of the call, call duration and the SIM used to make call to the contact.
- **Call:** Allows you to initiate the voice call to the selected contact number.
- **Write Message:** Use to create and send SMS or MMS to the selected contact.
- **Add To Contacts:** You can add the

selected number to your phonebook & also to any existed contact number. You can add the new contact to SIM1, SIM2, and phone memory.

- **Add To Blacklist:** Enable this function to blacklist contact numbers from your device's contacts so that the blacklisted numbers cannot reach your phone.
- **Add To Whitelist:** Enable this function to Whitelist contact numbers from your device's contacts so that the Whitelisted numbers only can reach your phone.
- **Delete:** Use to delete the selected contact from the call logs.
- **Delete All:** Use to delete the respective type of calls, such as missed, received or dialed calls.

memory used in SIM1, SIM2 and phone, memory of undownloaded MMS, WAP push memory and OTA memory.

## Multimedia

### Camera

Use the built-in camera to take and save pictures. Press

**Menu→Multimedia→Camera** or press **Up** navigation key in the idle mode to launch the camera function.

To take a picture, focus the camera towards the object you wish to click, and then press **Capture (OK key)**.

**Note:** Do not move your hand until the captured photo displays on the screen as a still image.

Press **Left soft key** to view and use other

camera **Options:**

- **More options:**The available more options are:
  - **Shoot Mode** – Select the shoot mode for capturing the image as camera mode or camcorder mode.
  - **Size** - Set the size of the image, as 1280X960, 640X480, 320X240, and 240X320.
  - **Night Mode-** Set the mode as normal or night to capture images in low light area.
  - **Brightness** – Allows you to adjust the brightness level of camera while capturing the image.
  - **Contrast** – Allows you to increase or decrease the contrast for capturing the image.

messages that you can send later.

### Sentbox

This folder also stores sent messages.

### Security Inbox

You can secure messages with password protection, the default password is 0000.

### Templates

Templates store 10 pre-written text messages for ready usage. You can edit the templates according to your wish and also store the messages that you send frequently.

### Broadcast Message

A network service, via which you receive messages on various topics from your service provider.

### Voice Mail Server

The Voice Mail Server is an interactive system for storing, processing and reproducing verbal messages. The service is operator dependent and the settings are provided by the operator upon activating the service on the SIM cards.

Press **Options** to view additional functions:

#### Settings:

Configure the settings for sending and receiving SMS, MMS and Broadcast Message.

### Delete All

Select to delete all messages folder by folder.

### Memory Capacity

Allows you to view the SMS and MMS

### Fun Zone

Press **Menu** → **Fun Zones**, to access the pre-installed Fun Zone applications from the Fun Zone.

#### Fun Zone

You can subscribe to cricket alerts and other alerts via Fun Zone. You will be charged an additional amount from your network service provider for using any services via Fun Zone.

#### Games

Allows you to play Pushbox, Snake and Tetris games.

### User Profiles

The available profiles are Normal, Silent, Meeting, Indoor, Outdoor, Earphone

and Bluetooth. Press **Activate (OK Key)** to set the selected User Profile. Press **Options** to perform additional functions, such as **Add**, **Delete** and **Settings**. You can also customize the profiles with various options such as rename, ring settings, adjust volume, ring type, other alert rings and so forth so that whenever you receive an incoming call or a new message, you can modify the use of your device to different types of call environments.

### Messages

In Messages, you can send and receive SMS, MMS, and Broadcast message. From the idle screen, press **Menu** → **Messages** to view the available

functions of messaging. Message functions are available depending on the network services that your service provider supports. The various options are:

### Write Message

Allows you to compose and send SMS and MMS

- **New SMS:** On the idle screen, select **Menu → Messages → Write Message → New SMS**, to compose and send text message. The available options are:
  - **Send** - Select it to send the text message to selected contact number.
  - **Insert Template** – You can choose from templates to send a text message quickly.
  - **Add Contact Info** – Allows you to add

contact info to your text message.

- **Add Emoticon** – Allows you to use emoticon icons in your text message.
- **Timing Send** – You can choose On/Off.
- **Save As Draft** – Use it to save the text message as a draft to edit and send the text message later.
- **Exit** – Use it to Exit from the message composing screen.
- **New MMS:** On the idle screen, select **Menu → Messages → Write Message → New MMS**. The device supports multimedia messaging, which allows you to send rich content (images, videos, sounds and so on) as message attachment to recipients. The available options are:
  - **Send**- Select it to send the multimedia

message to any contact number.

- **Preview**- Allows you to have a preview of multimedia message.
- **Add New Recipient** - You can add contact numbers. Select the option to send the multimedia message from device's contacts or you can manually enter the number.
- **Add**- Allows you to add text, next page, previous slide, picture, audio, video, and an attachment to the MMS.
- **Delete**- Allows you to delete the attached item.
- **Save As Draft**- Use it to keep the message in Drafts folder. It stores the partial or complete multimedia message that you can send later.
- **Set Slide Time**- Allows you to set the

slide time of the MMS.

- **Text Layout** – With this option, you can choose the settings of text on the message, it can be above or below the attachment used.

### Inbox

Use to view received messages.

### Outbox

If the device is unable to transmit a text message, it is stored temporarily in the Outbox folder.

### Drafts

While writing a text message, press **Options → Save** and while writing a multimedia message, press **Options → Save as draft** to keep it in Drafts folder. It stores the partial or complete text